

# 2.

## CANDY CDSH 2D1145300



### P START A PROGRAM

1. 1.

2. 2.

3. 3.

### ⌚ DELAY START

1. 1.

2. 2.

3. 3.

# 3.



\*

# 4.





		🌡️	⌚	🌀	Exp≡
P1	70°C	70°	130'	YES	YES
P2	50°C	50°	298'	YES	YES
P3	60°C	60°	115'	YES	YES
P4	45°C	45°	72'	YES	-
P5	45°C	45°	30'	YES	-
P6	45°C	45°	20'	-	-
P7	45°C	45°	98'	YES	YES
P8	75°C	75°	139'	-	-



# 5.



## SETUP MENU

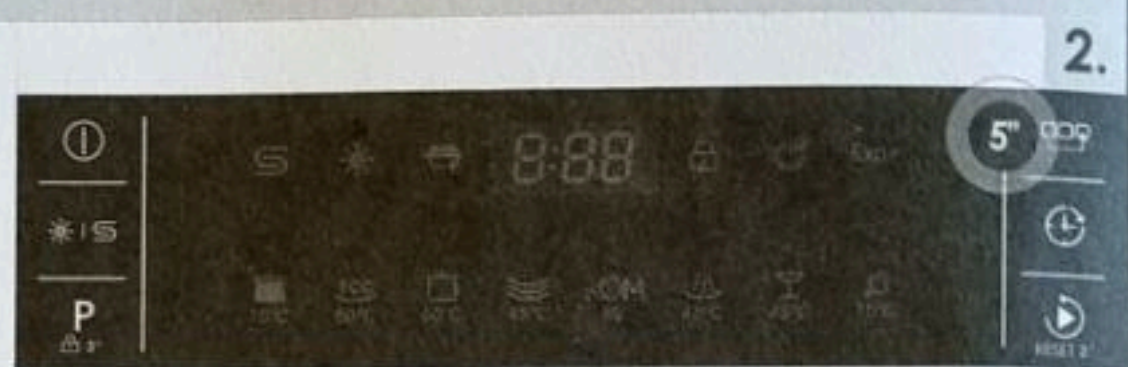
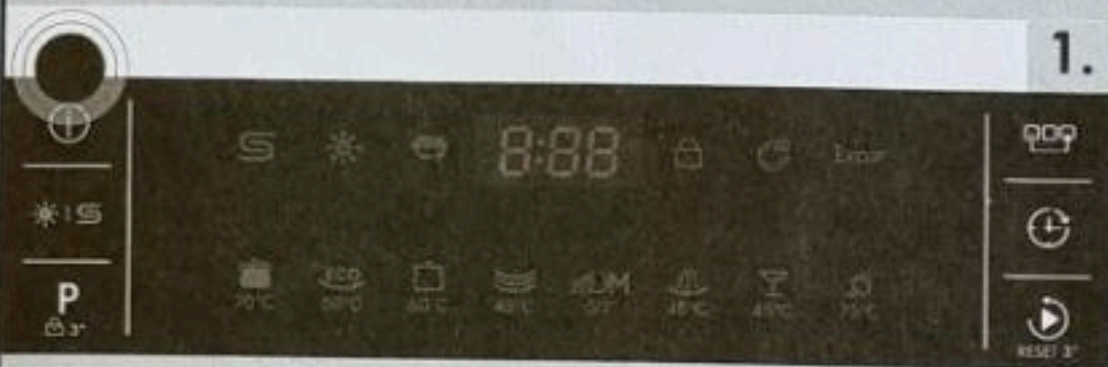


### SOFTENER




L	°FH	°dH
1	-	-
2	0-15	0-8
3	16-22	9-12
4* DEFAULT	23-29	13-16
5	30-54	17-30
6	55-89	31-50

### BUZZER

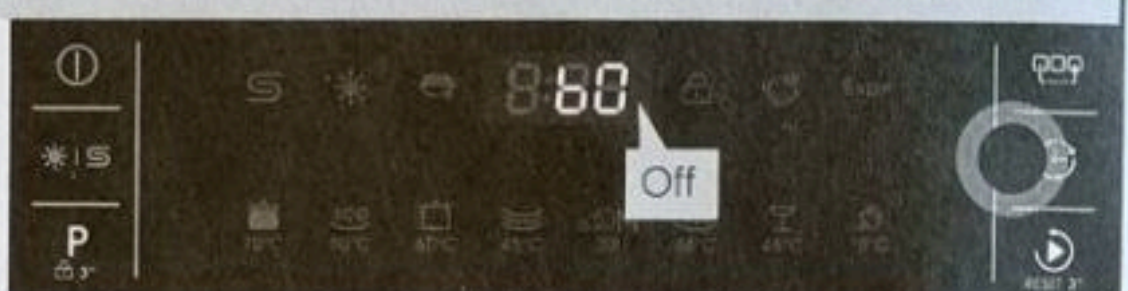
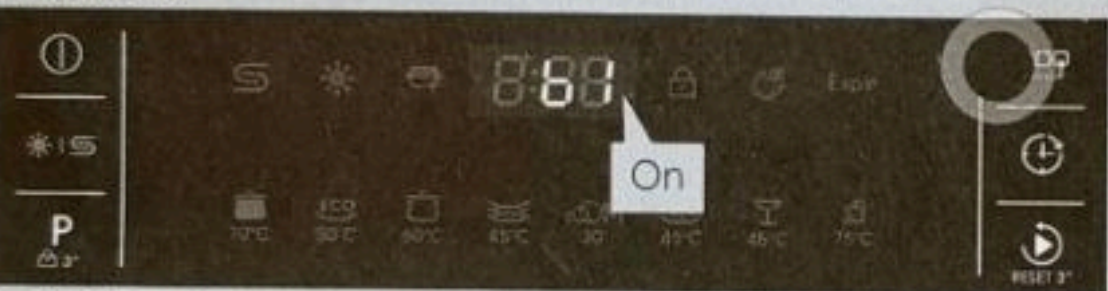


### RINSE AID

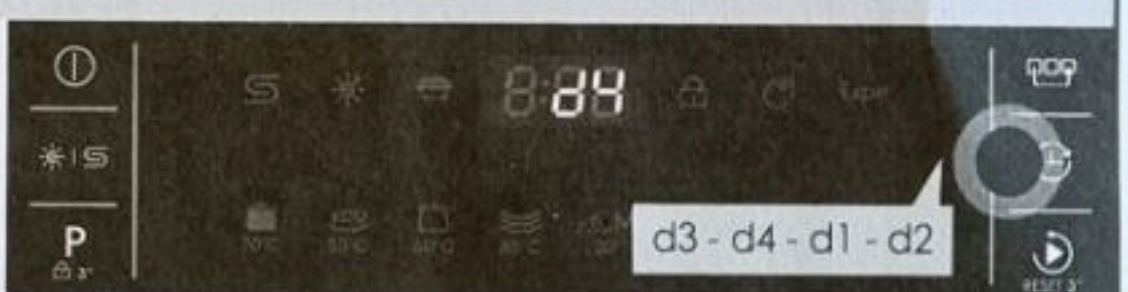

L	d1	d2	d3* (DEFAULT)	d4
ml	0	2	5	6

### MEMO

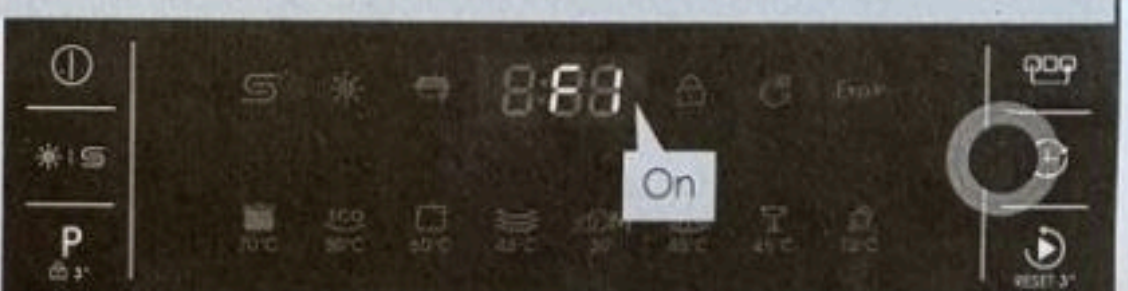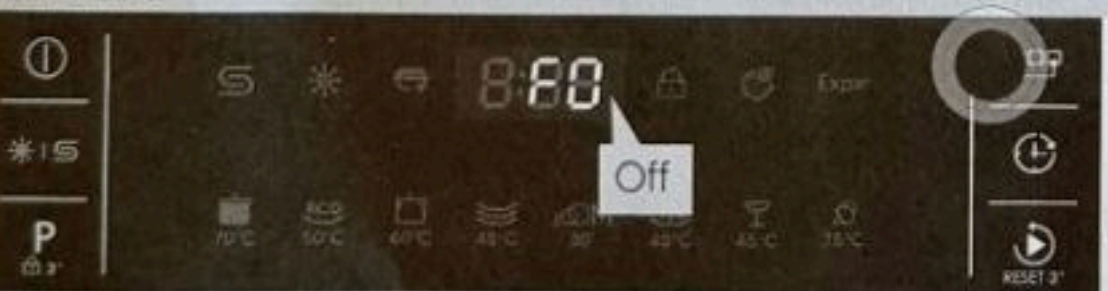

## OPTIONS

